



Board Replacement Procedures for Nail-Down Hardwood

November, 2023

Tools



- Safety glasses
- Circular saw
- Vacuum
- Nail puller
- Tapping block
- Utility knife
- Hammer
- Chisel
- Marker
- Epoxy kit
- 3M 2080 Blue Tape


Place Tape Around the Damaged Board




Draw Cut Lines On Board



Set the Blade Depth

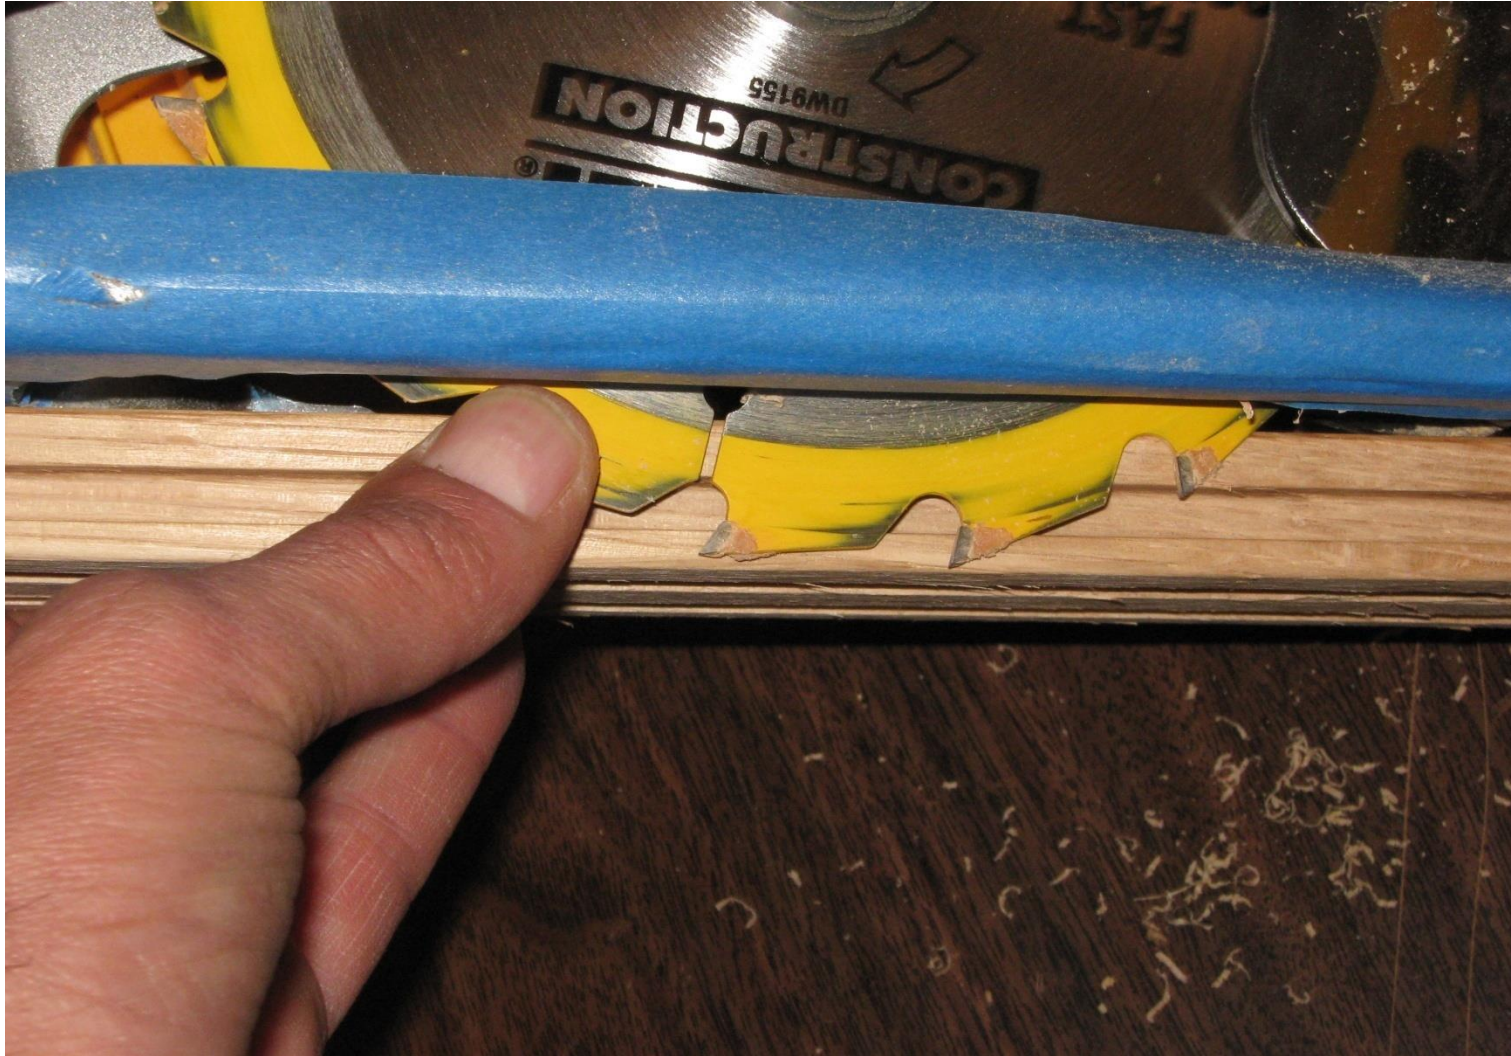

Cut Along the Lines

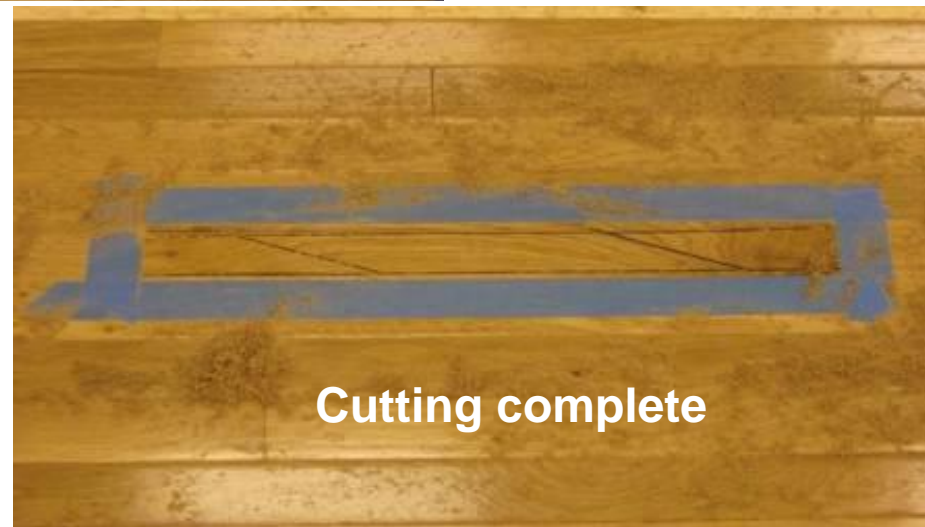


Vacuum the Area



Remove the Center Cut First



Use Chisel To Split The End Pieces And Remove

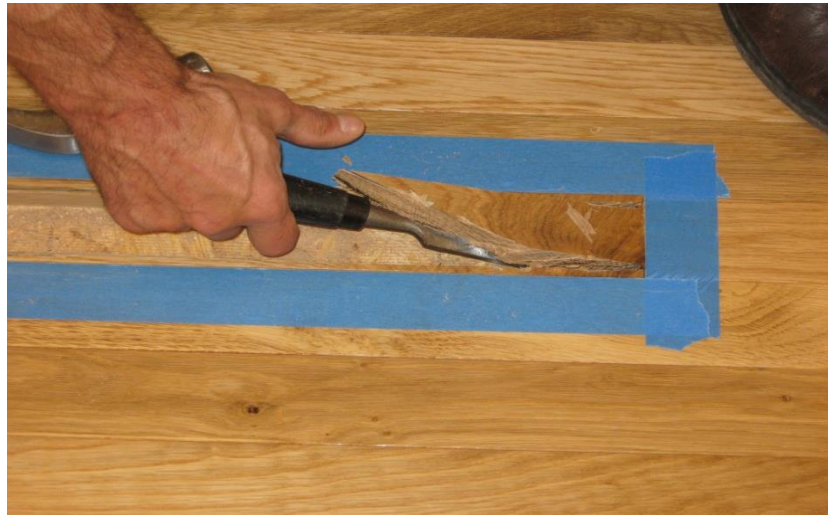

Remove the Side Pieces



Vacuum the Area and Remove Blue Tape




Prepare the New Board - Cut Off Both Bottom Grooves



Dry Fit New Board



Apply Adhesive

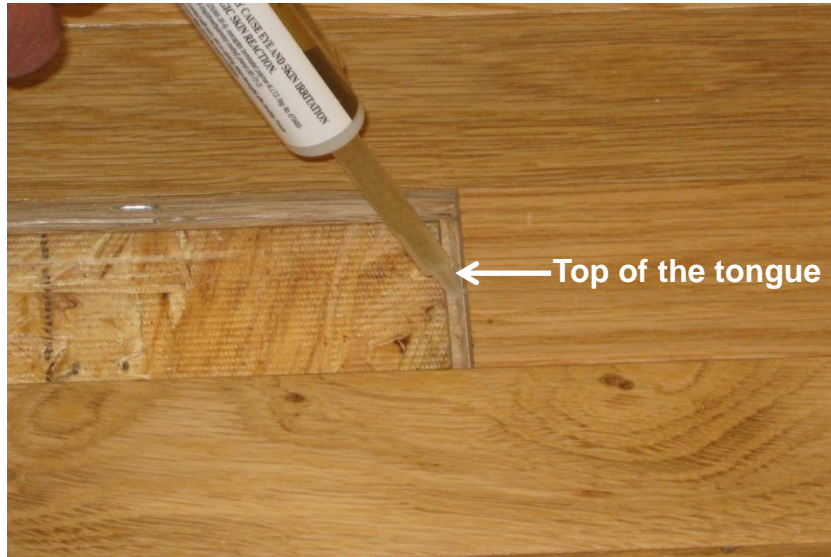

Insert Replacement Board



Use nylon tapping block to set the board



Finished repair
Apply weight if needed

RESOURCES

AHF Products Customer Service Techline
(866)243-2726 M-F 9:00 am – 4:30 pm, EST
ahfproductsupport@ahfproducts.com

www.floorexpert.com